

# STX 160 Fuel Blowout Fix

Tools:

6mm Socket

1/4 Ratchet

Phillips Screw Driver

## Installation Instructions

1. Open Hood and remove panel from front engine storage compartment to hull.
2. Remove 6mm clamp that holds on filler tube right behind the panel.
3. Reach up into hull and remove clamp on filler neck.
4. Remove Phillips screws holding on filler neck.
5. Remove filler hose
6. Install KP sleeve as pictured below.  
Make sure it sits below where the filler neck goes. Check before installing. You can use oil on the insert to aid with installation or use a rubber mallet.
7. Follow steps in reverse to reinstall.

